


Assembly Instructions for

Universal Tire Stands


Carton Contents: 4 Plastic Logo Panels, 4-#10 x 3/4" Bolts,
4-Plastic Washers & 4 Wing Nuts

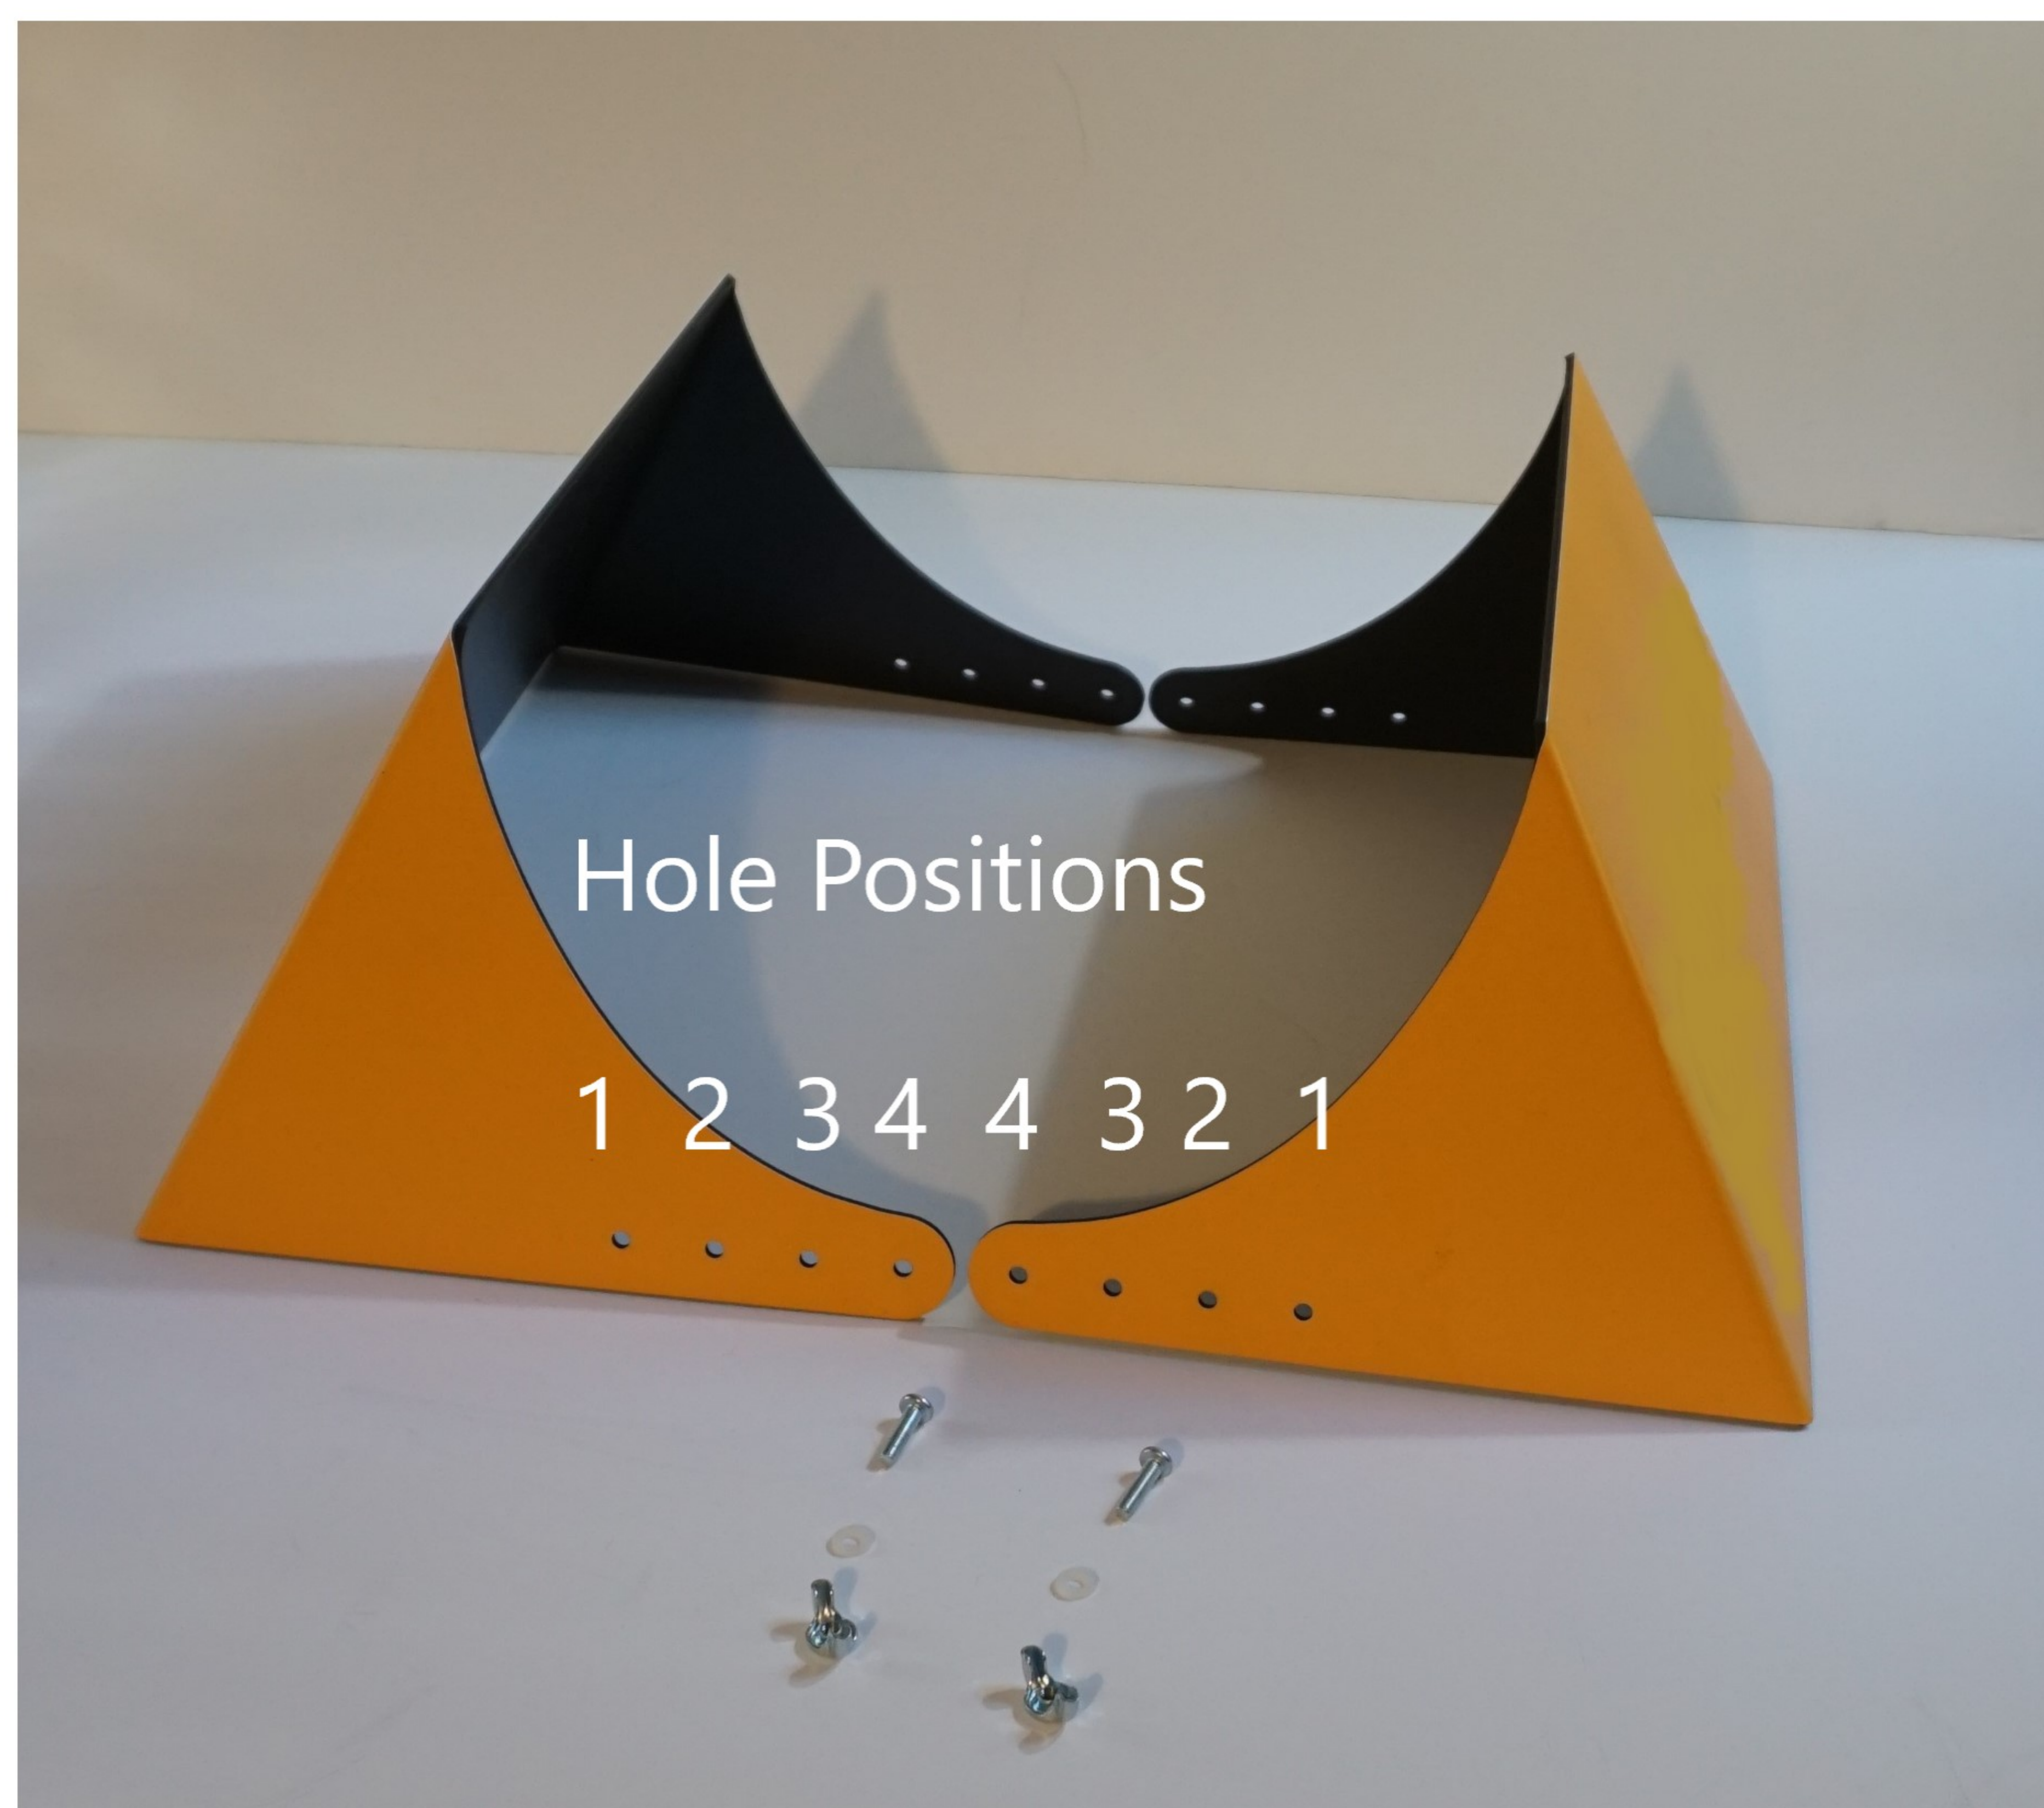

Instructions:


1. Set the panels out as shown above. Choose the hole position that matches the width of the tire you are displaying.
2. Overlap one panel over another, align holes in matching positions and insert bolt from outside.
3. Insert plastic washer on bolt & lightly tighten with wing nut on inside of stand.
4. Set tire in place. 5. Make any final adjustments and tighten wing nut securely.

The hinged panels allow for flexibility in fitting different tire widths. The tire stand can be built to fit the tire you are displaying at each of the widths shown below.

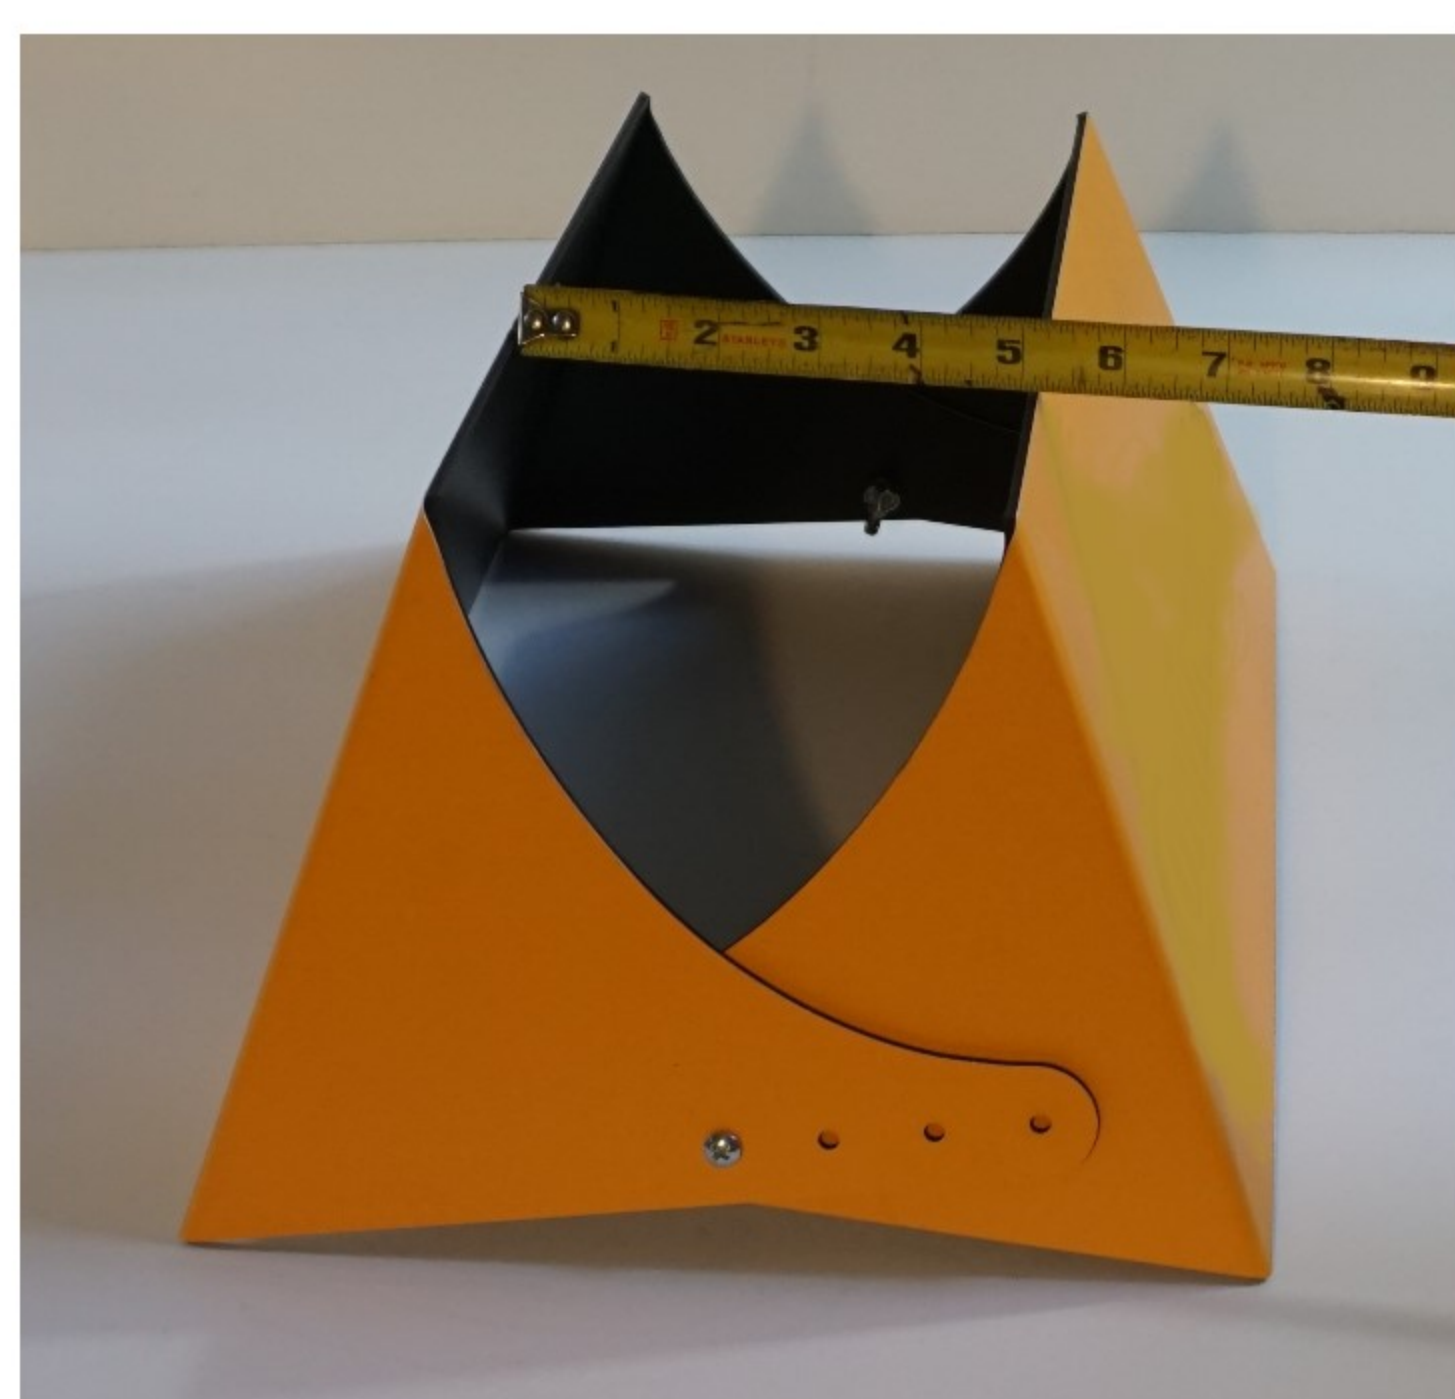


Hole #1

4-5" width

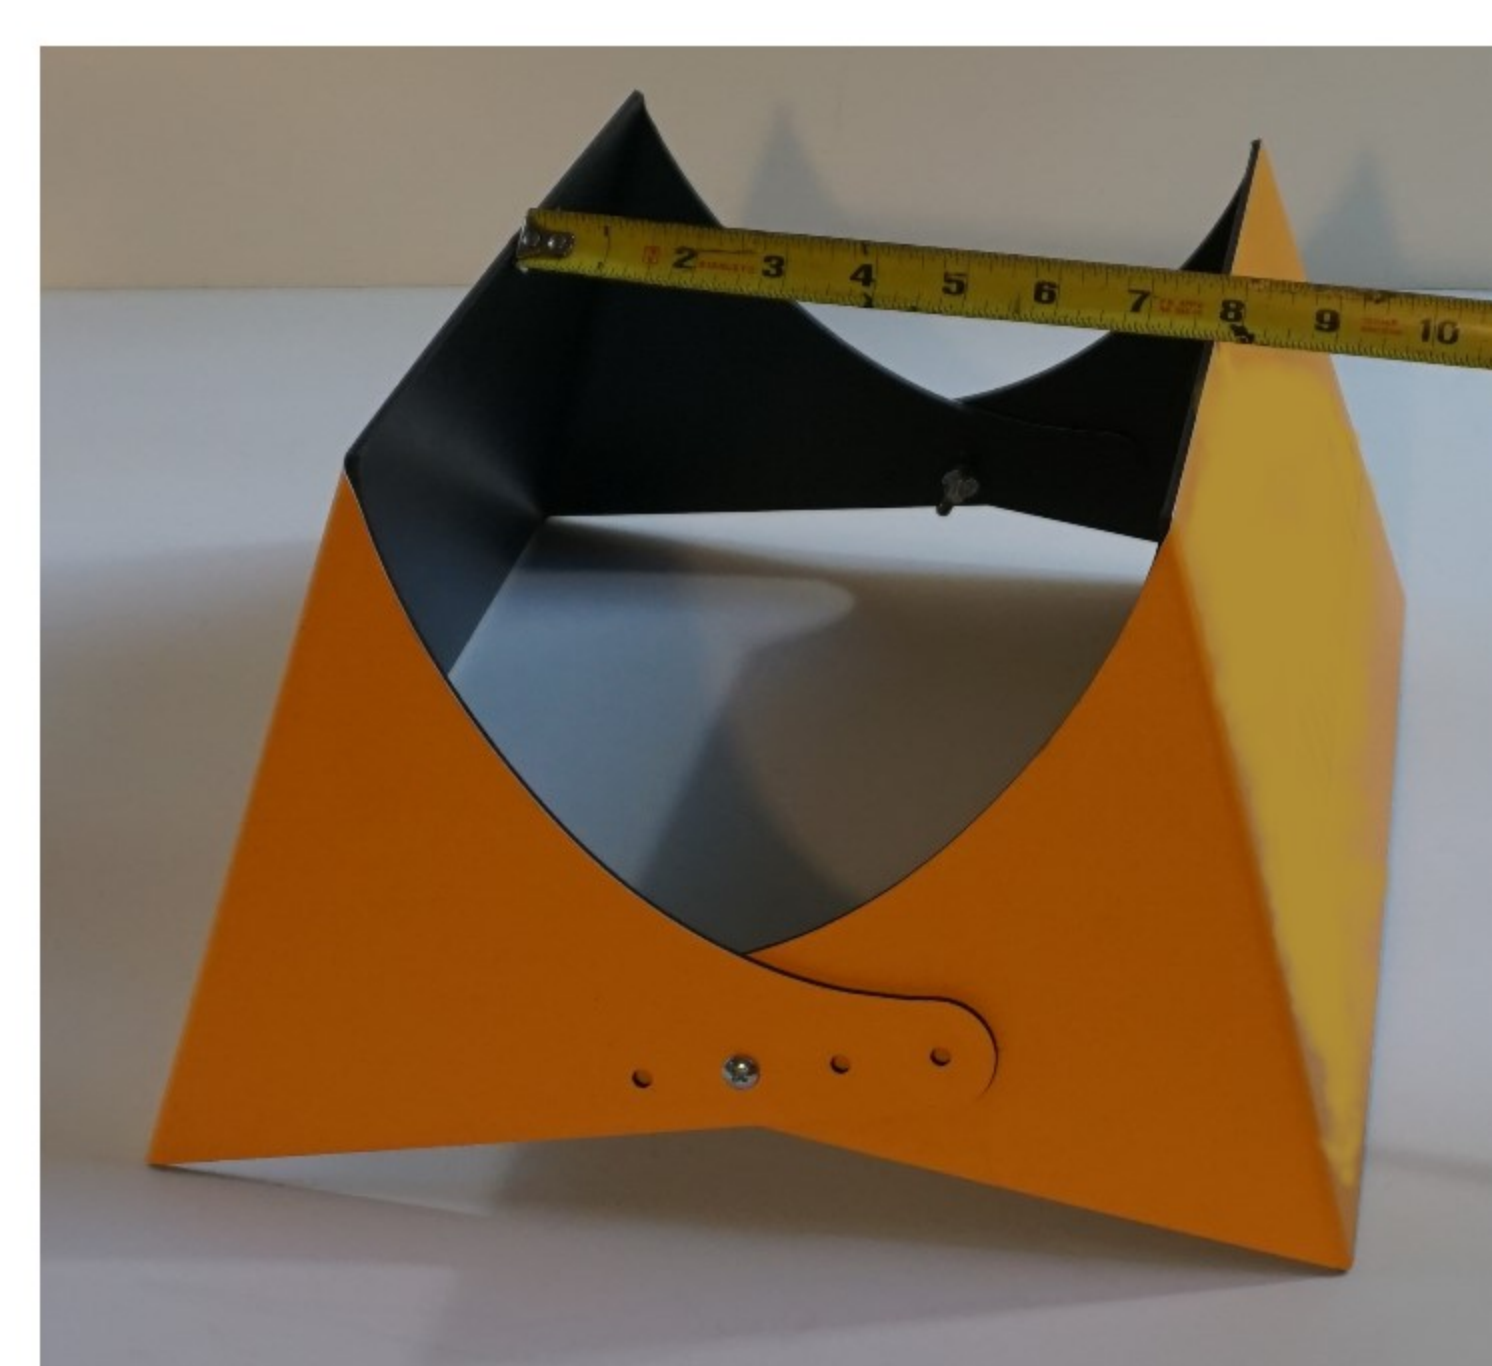


Hole #2

6-7" width

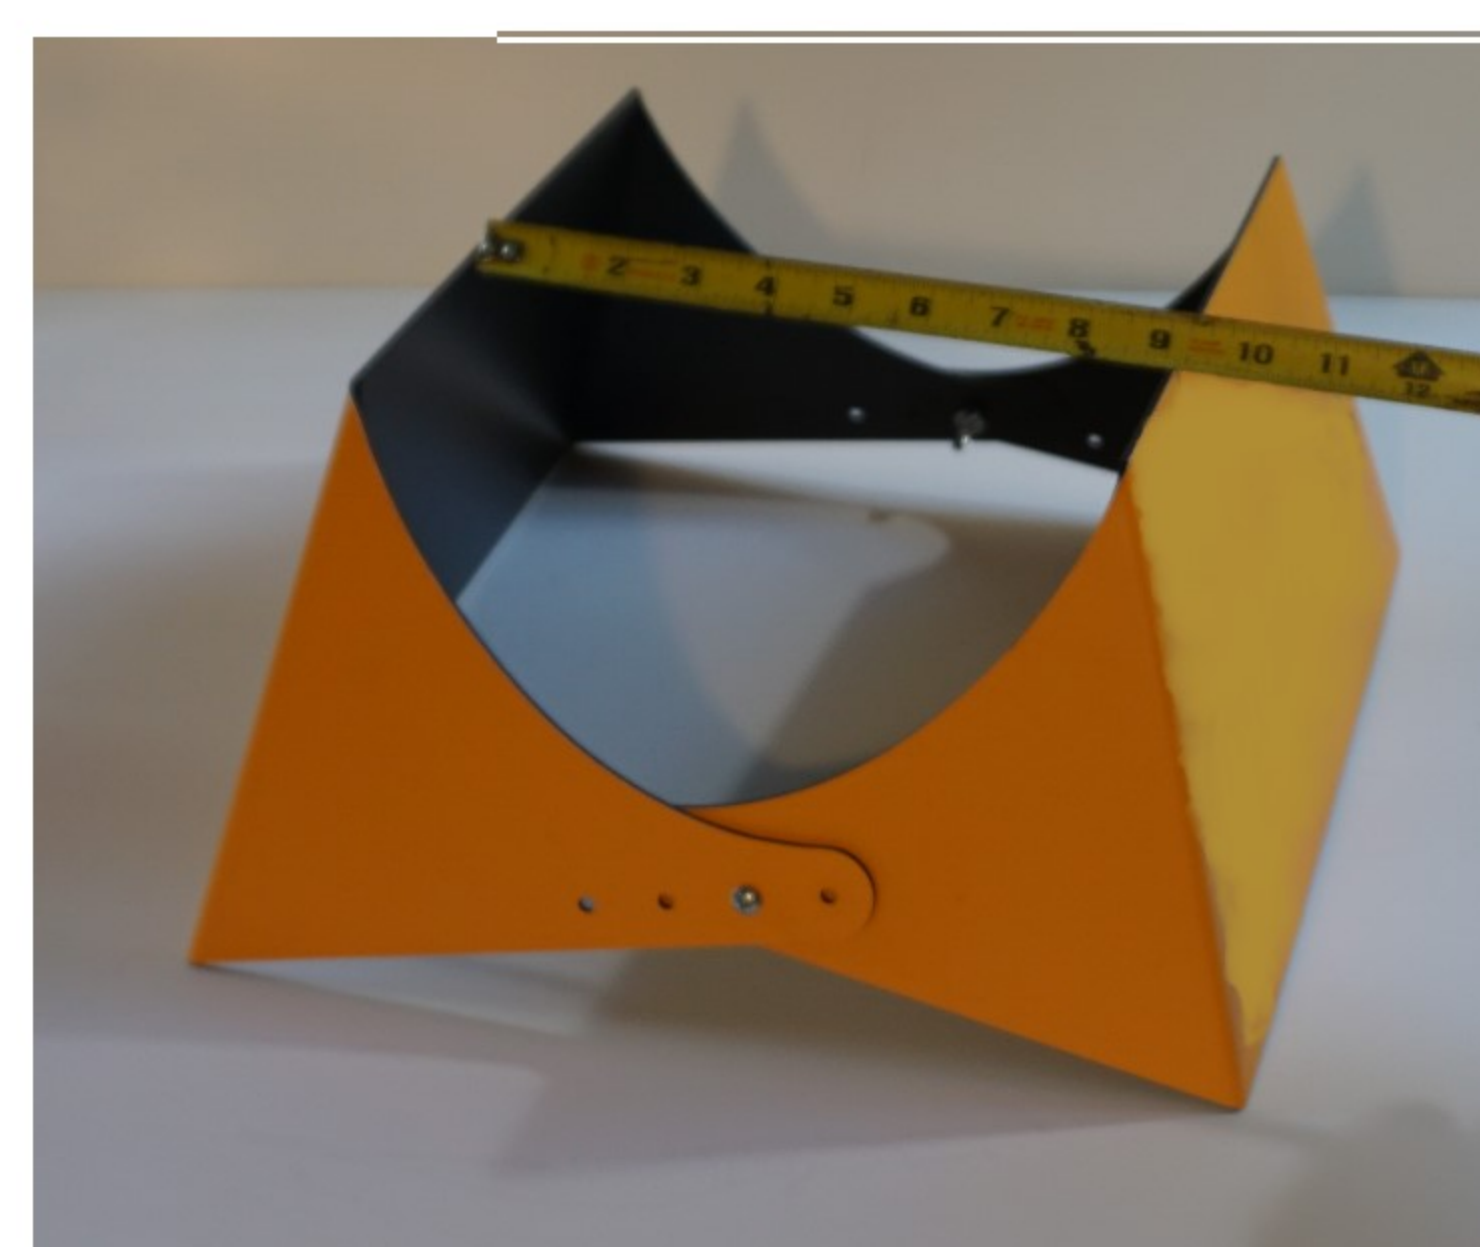

Hole#3

8-9" width

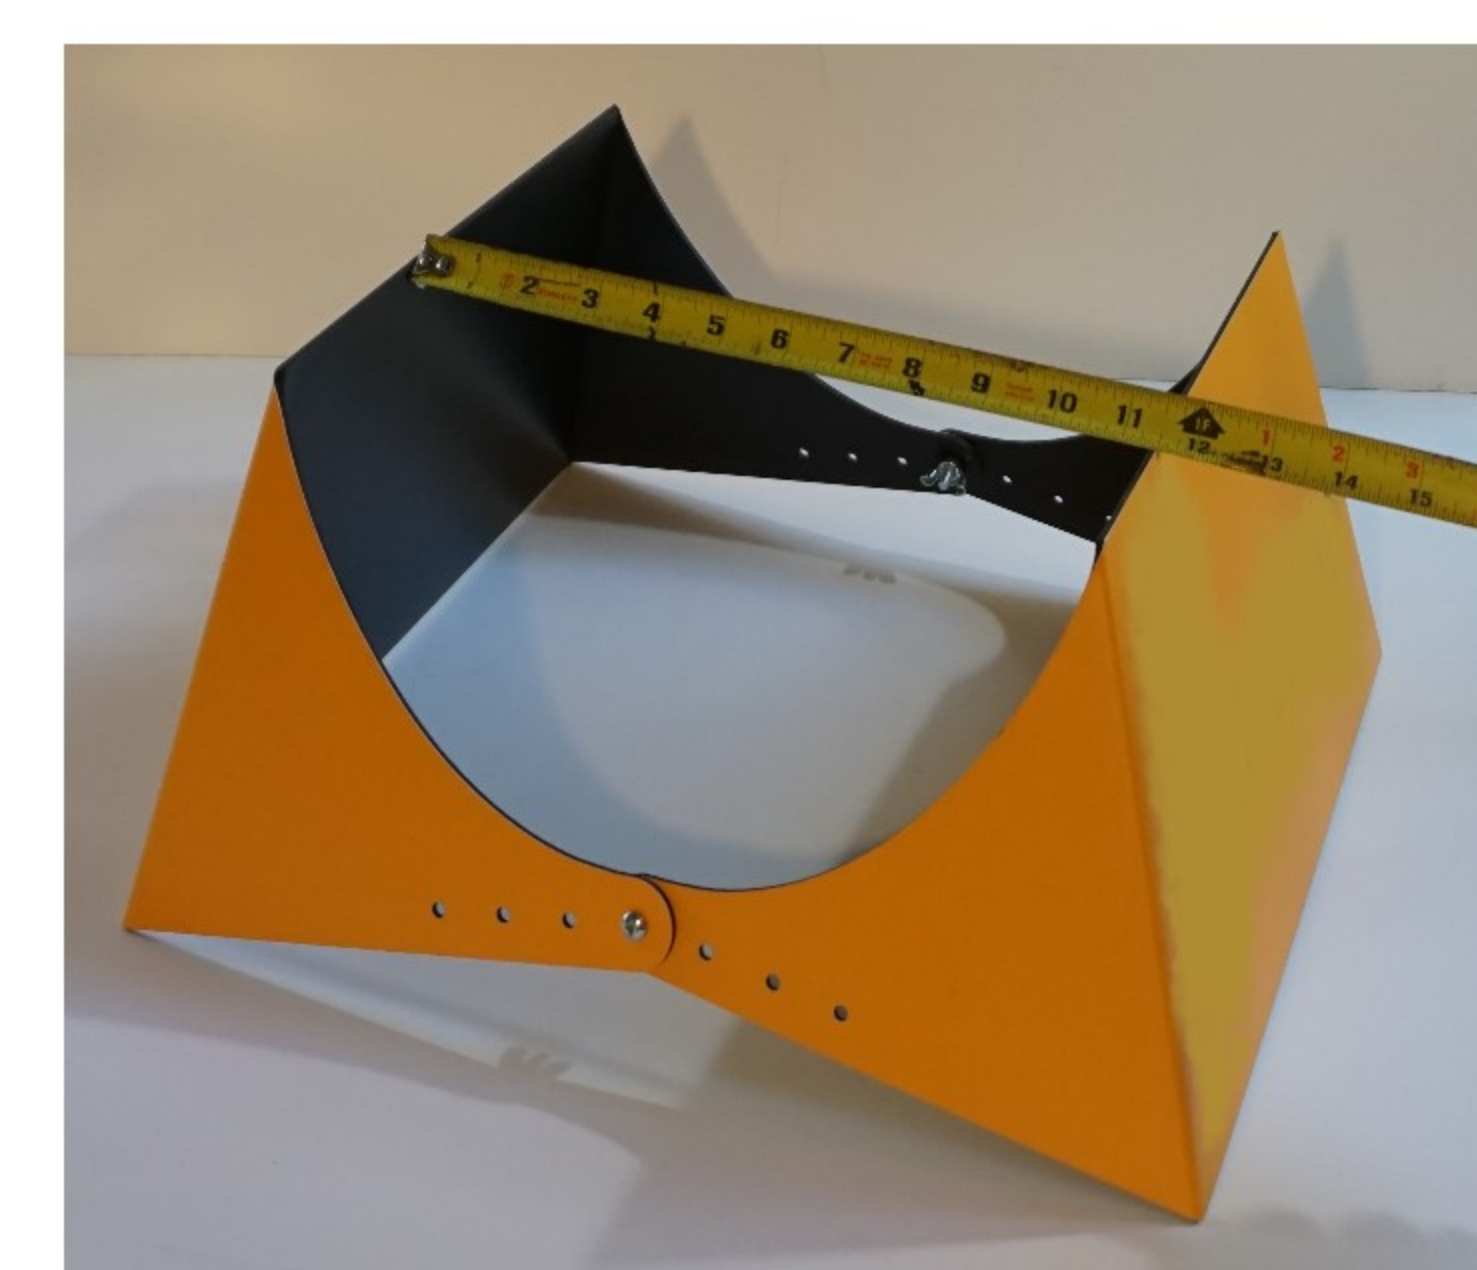

Hole#4

10-12" width

Jamesco recommends using the display for UNMOUNTED TIRES ONLY.

For any questions please call Jamesco, Inc. 330-867-5136